

Date: Tuesday, 14/10/2008 1:17:18 PM
User: Julie Lecrocq

Process Sheet

Customer : CU-DAR001 Dart Helicopters Services
Job Number : 42588
Estimate Number : 10973
P.O. Number :
This Issue : 14/10/2008 S.O. No. :
Prsht Rev. : NC
First Issue :
Previous Run : 42587
Written By :
Checked & Approved By :
Drawing Name : 206L AFT X-TUBE
Part Number : D206667203BL
Drawing Number : D206-667-243 REV B
Project Number : N/A
Drawing Revision :
Material :
Due Date : 04/11/2008 Qty: 1 Um: Each

Comment :
Est Rev:F 05.09.01 Add holes for compatibility with Bell
Skidtubes KJ/JLM
Est Rev:G 08-06-03 update as per DS19415 (ECN1198) DD
verified by:ec
Est Rev:H 08-07-18 remove thread masking in step 12 DD
verified by:EC

Additional Product

Job Number:



Seq. #: Machine Or Operation: Description :

1.0 DC DOCUMENT CONTROL



Comment: DOCUMENT CONTROL
Photocopy bluefile and create labels as per PPP D206-667-203 CHG003

2.0 D206667203TRN Crosstube Turning Detail



Comment: Qty.: 1.0000 Each(s)/Unit Total: 1.0000 Each(s)
CROSSTUBE TURNING DETAIL
batch 642708

MB 08-10-27

3.0 BENDING BENDING MACHINE - SKIDTUBES



Comment: BENDING MACHINE
Bend tube as per Dwg D206-667-243 using CNC bender program 206L-AF and Folio FT

MB 08-10-27

4.0 QC15 DIMENSIONAL CHECK OF X-TUBES



Comment: DIMENSIONAL CHECK OF X-TUBES

MB 08-10-27

5.0 CROSSTUBES CROSSTUBES RESOURCE 1



Comment: LANDING GEAR RESOURCE 1

1-Drill pilot holes in tube using drill Jig DT8583 & DT8584 as per Dwg D206-667-243. Drill all (3) top holes
2-Drill and Ream all holes in tube to finish size using drill Jig DT8583 & DT8584 as per Dwg D206-667-243

MB 08-10-28

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Tuesday, 14/10/2008 1:17:18 PM
User: Julie Lecdcq

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: 206L AFT X-TUBE

Job Number: 42588

Part Number: D206667203BL

Job Number:



Seq. #:	Machine Or Operation:	Description :
---------	-----------------------	---------------

Check dimensions between holes on all four sides.

3-Flip tube and switch drilling Jigs from right to left, left to right. Locate Jigs off existing holes using "T" pins.

4-Drill pilot holes using drill Jig DT8583 & DT8584 as per Dwg D206-667-243. Drill only the top (2) holes.

5-Drill & ream the top (2) holes to finish size using drill Jig DT8583 & DT8584 as per Dwg D206-667-243

6-Drill Fwd rivet holes using drill Jig DT8789FWD as per Dwg D206-667-143. Note: Fwd side has 3x top holes.

7-Drill Aft rivet holes using drill Jig DT8789 as per Dwg D206-667-243.

8-C'sink holes as per Dwg D206-667-243.

9-Deburr & Inspect for surface damage. Repair damage within limits as per Dwg D206-667-243

10-Scribe part # and batch # using vibrating stylus as per Dwg D206-667-243
Inside of Cuff(Donot engrave on outside of tube)

6.0 HAND FINISHING1

HAND FINISHING RESOURCE #1



AUM 8-10-28



Comment: HAND FINISHING RESOURCE #1

Chemical Conversion Coat as per QSI 005 4.1

7.0 QC3

INSPECT POWDER COAT/CHEMICAL CONVERSION



Comment: INSPECT POWDER COAT/CHEMICAL CONVERSION

S 08/10/30 (X)

8.0 QC5

INSPECT WORK TO CURRENT STEP



Comment: INSPECT WORK TO CURRENT STEP

S 08/10/30 (A)

9.0 OUTSIDE SERV.11

OUTSIDE SERVICE -CROSSTUBES



Comment: Sub-Contracting OUTSIDE SERVICE -CROSSTUBES

C20811103 @ P/O: 7304

10.0 PACKAGING 1

PACKAGING RESOURCE #1



Comment: PACKAGING RESOURCE #1

Inspect for transit damage

Ensure copy of NDT results attached to work order.

P 08/10/30 (1)

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Tuesday, 14/10/2008 1:17:18 PM
User: Julie Lecocq

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: 206L AFT X-TUBE

Job Number: 42588

Part Number: D206667203BL

Job Number:



Seq. #:

Machine Or Operation:

Description :

11.0

005
005

DIMENSIONAL CHECK



ml 08 11 05 (1)



P70

Comment: Inspect for damage & ensure results are as per Dwg D206-667-103

12.0

SPRAY PAINTING

SPRAY PAINTING



Comment: SPRAY PAINTING

1-Prime inside and outside crosstube as per QSI 005 4.2

2-

-PAINT DELFLEET BLUE

-CLEAR DELFLEET

ml 08 11 05 (1)

P70

13.0

QC14

INSPECT SPRAY PAINT



Comment: Inspect Spray Paint

Wrap in plastic bag to protect from scratches

208-11-11 (1)

14.0

D2873045

Nut Plate Assembly



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Pick:

Qty Part number Description Batch
2 D2873-045 Nut Plate *38316*

RT 08-10-04

15.0

D2873043

Nut Plate Assembly



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Pick:

Qty Part number Description Batch
2 D2873-043 Nut Plate *40218*

RT 08-11-04

16.0

MS20601AD4W10

RIVET



Comment: Qty.: 14.0000 Each(s)/Unit Total : 14.0000 Each(s)

Pick:

Qty Part number Description Batch
14 MS20601AD4W10 Rivet *108036*

RT 08-11-04

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector
06-11-11	11-0	QCS required for LPI inspection. perm. change	ALREADY Done [Signature]			[Signature] 06-11-11	[Signature] 06-11-11

Part No: D206-667-203BL PAR #: _____ Fault Category: _____ NCR: Yes ☒ No ☐ DQA: [Signature] Date: 08.11.13
 Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR: <u>42588</u>		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			
08-11-06	12-0	Paint is thin on the ends of the tube. Apparent in the sun light. R.C: No grey Epoxy primer in the base, & had to use yellow & not enough blue coats.	[Signature] 08/11/12	Scuff and re coat blue Per Q51005	m 08/11/08	[Signature] 06-11-11	[Signature] 08/11/12	[Signature] 08-11-06

NOTE: Date & initial all entries

Date: Tuesday, 14/10/2008 1:17:18 PM
User: Julie Leccoq

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: 206L AFT X-TUBE

Job Number: 42588

Part Number: D206667203BL

Job Number:



Seq. #:

Machine Or Operation:

Description :

17.0

CROSSTUBES

CROSSTUBES RESOURCE 1



Comment: LANDING GEAR RESOURCE 1

1-Install nut plates as per Dwg D206-667-243.

063

RT 08-11-04

18.0

D3595075450

RUBBER CUSHION 7/8" x 4.50



Comment: Qty.: 4.0000 Each(s)/Unit Total: 4.0000 Each(s)

RUBBER CUSHION 7/8" x 4.50

B 41108

RT 08-11-10

19.0

D28921

Support



Comment: Qty.: 2.0000 Each(s)/Unit Total: 2.0000 Each(s)

Pick:

Qty Part number

Description Batch

2 D2892-1

Support

42566

RT 08-11-10

20.0

MS2192022

Clamp(per MIL-DTL-8783C)



Comment: Qty.: 4.0000 Each(s)/Unit Total: 4.0000 Each(s)

Pick:

Qty Part number

Description Batch

4 MS21920-22

Clamp

107356

RT 08-11-10

21.0

SKIDTUBES 1

SKIDTUBESS RESOURCE 1



Comment: LANDING GEAR RESOURCE 1

magnabond B 108966

1-Install abrasion strips as per QSI 035 using DT8580. Note: (3) top holes should be facing up.

2-Install supports and clamps as per Dwg D206-667-243. Torque clamps to 80-100 in lb

RT 08-11-11

22.0

QC5

INSPECT WORK TO CURRENT STEP



Comment: INSPECT WORK TO CURRENT STEP

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Tuesday, 14/10/2008 1:17:18 PM
User: Julie Lecocq

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: 206L AFT X-TUBE

Job Number: 42588

Part Number: D206667203BL

Job Number:



Seq. #:

Machine Or Operation:

Description :

23.0

PACKAGING 1

PACKAGING RESOURCE #1



Comment: PACKAGING RESOURCE #1

Pick Packing Kit

24.0

AN534A

Bolt



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)

Bolt

Batch: M109061

25.0

MS21042L5

Nut



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)

Nut

Batch: M108827

26.0

AN510A

Bolt



Comment: Qty.: 10.0000 Each(s)/Unit Total : 10.0000 Each(s)

Pick:Packing Kit

Qty Part number

Description Batch

10 AN5-10A

Bolt

M108990

27.0

AN532A

Bolt



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)

Pick:Packing Kit

Qty Part number

Description Batch

4 AN5-32A

Bolt

M109068

28.0

AN960JD516

Washer



Comment: Qty.: 18.0000 Each(s)/Unit Total : 18.0000 Each(s)

Pick:Packing Kit

Qty Part number

Description Batch

18 AN960JD516

Washer

M109059

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Tuesday, 14/10/2008 1:17:18 PM
User: Julie Lecdtq

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: 206L AFT X-TUBE

Job Number: 42588

Part Number: D206667203BL

Job Number:



Seq. #:

Machine Or Operation:

Description :

29.0

QC4

INSPECT 100% KITS FOR COMPLETENESS



Comment: INSPECT 100% KITS FOR COMPLETENESS

08/11/11 (1)

30.0

PACKAGING 1

PACKAGING RESOURCE #1



Comment: PACKAGING RESOURCE #1

Identify and pack for shipping as per PPP D206-667-203

Location:

PPP Rev: D

8/11/12

54

31.0

QC21

FINAL INSPECTION/W/O RELEASE



Comment: FINAL INSPECTION/W/O RELEASE

08/11/12 (1)

Job Completion



u 08.11.12

B42588 D206-667-203

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____


Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

DART AEROSPACE LTD	Work Order: 42588	
Description: Crosstube High Aft (206L)	Part Number: D206-667-203	
Inspection Dwg: D206-667-243 Rev: B		Page 1 of 1

Required Dimension	Min	Max
Height	23.46	23.58
1/2 Span	41.86	41.98
Angle	54	56
Total Span	83.72	83.96

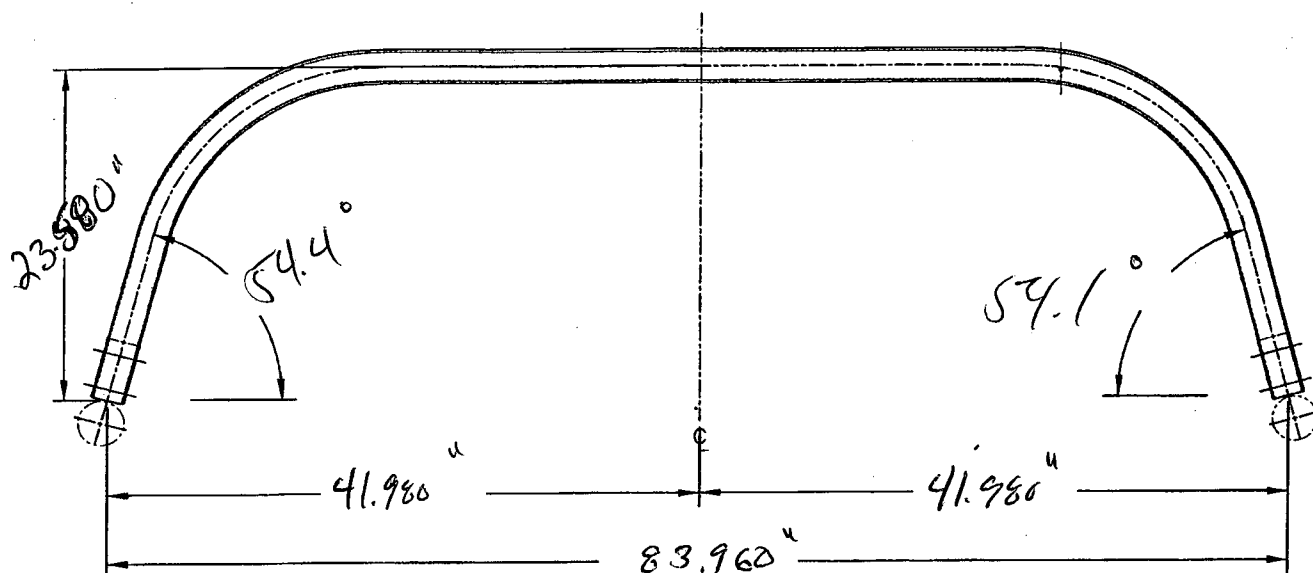

Comments

QC15 Inspection	S
Date	08/10/28

Rev	Date	Change	Revised by	Approved
A	07.02.06	New Issue	KJ/JM	[Signature]

DART

DESIGN PH	DRAWN BY PH	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED # DS	APPROVED # DS	DRAWING NO. D206-667-243	REV. B SHEET 1 OF 3
DATE 05.07.26		TITLE CROSSTUBE ASS'Y (206L HIGH AFT)	SCALE NTS
A	00.11.17	NEW ISSUE	
B	05.07.26	ADD HOLES AND NUT PLATES FOR COMPATABILITY WITH BHT/AA SKIDTUBES	

RELEASED
05-07-26**UNDER REVIEW**06.03.10 RH
12 Draw detail F
RH 08.10.14

Qty	Part Number	Description
X	D206-667-243	CROSSTUBE ASSEMBLY
1	D6004-115	CROSSTUBE
2	D2856-400-773	ABRASION STRIP
2	D2873-043	NUT PLATE
2	D2873-045	NUT PLATE
2	D2892-1	SUPPORT
14	MS20601AD4W10	RIVET (OR NAS9302B-4-10)
4	MS21920-22	CLAMP

SEE PSI 9415

GENERAL NOTES:

- 1) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
- 2) MATERIAL: MANUFACTURED FROM D6004-115
FINISHED LENGTH = 104.91±0.020
- 3) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005 4.1
PRIME INSIDE AND OUTSIDE PER DART QSI 005 4.2
PAINT OUTSIDE PER DART QSI 005 4.2
- 4) PART IS SYMMETRIC ABOUT CENTERLINE.
- 5) RUN-OFF PART. BLEND OUT EDGE LONGITUDINALLY, TRANSITION SHOULD BE SMOOTH.
- 6) BEND PROGRESSIVELY WITH A MINIMUM OF 8 PASSES. MAXIMUM TUBE FLATTENING DUE TO BENDING IS 6% BASED ON O.D.
- 7) LIQUID PENETRANT INSPECT OUTSIDE SURFACE OF CROSSTUBE PER QSI 038.
- 8) SCRIBE DART PART NUMBER AND BATCH NUMBER IN THIS AREA WITH VIBRATING STYLUS.
- 9) INSTALL D2856-400-773 ABRASION STRIP WITH A 0.13 (REF) GAP ON BOTTOM SIDE OF CROSSTUBE, CENTERED OPPOSITE D2892-1 SUPPORT, PER QSI 035.
- 10) EXTREME CARE MUST BE TAKEN TO PROTECT THE OUTSIDE SURFACE OF THE TUBE. THE OUTSIDE SURFACE MUST BE SMOOTH AND FREE FROM SURFACE DEFECTS SUCH AS SCRATCHES, NICKS, OR DENTS. DEFECTS UP TO 0.005" MAY BE BLENDED OUT LONGITUDINALLY. CIRCUMFERENTIAL GRIND MARKS ARE UNACCEPTABLE.
- 11) IT IS OPTIONAL TO SEAL EDGES OF SUPPORTS AND ABRASION STRIP USING SIKAFLEX-241/291 SEALANT.
- 12) TORQUE CLAMPS 80 TO 100 IN-LB.

SHOP COPY

RETURN TO

ENGINEERING

UNCONTROLLED COPY

SUBJECT TO AMENDMENT

WITHOUT NOTICE

WORK ORDER


NO. 42588

SEE
PSI
9415

07-10-14


Copyright © 2000 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

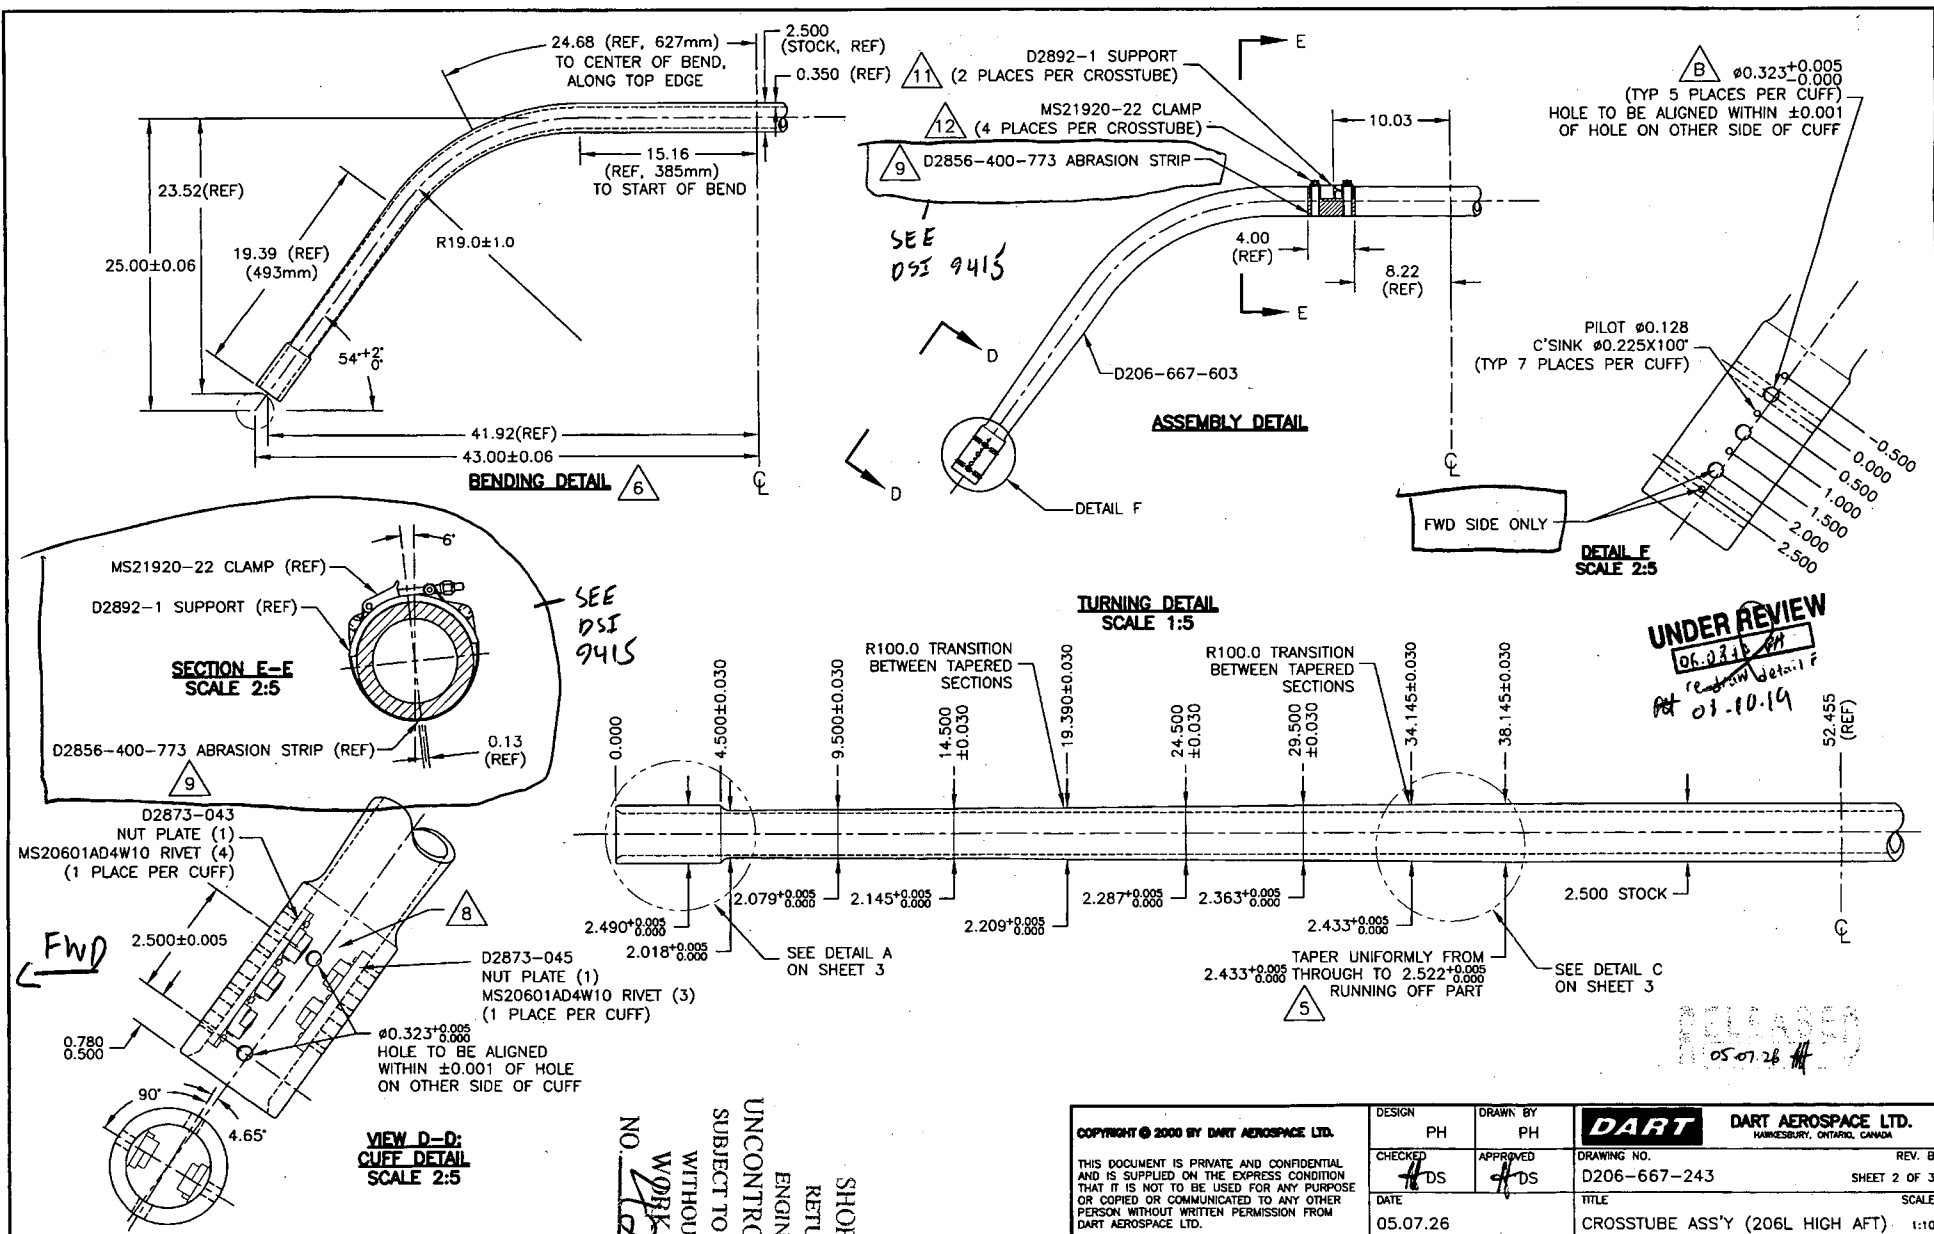


SHOF COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 1258

DETAIL A: CROSSTUBE CUFF

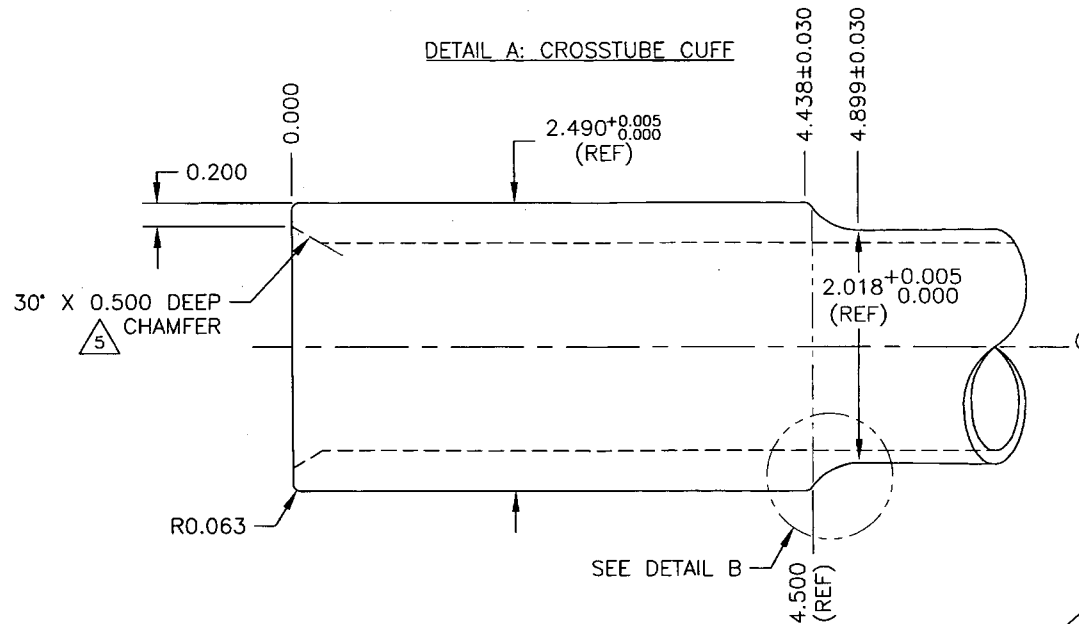


05.07.26
UNDER REVIEW
 06.08.10 PH
 Re-draw detail if
 PH 08.10.14

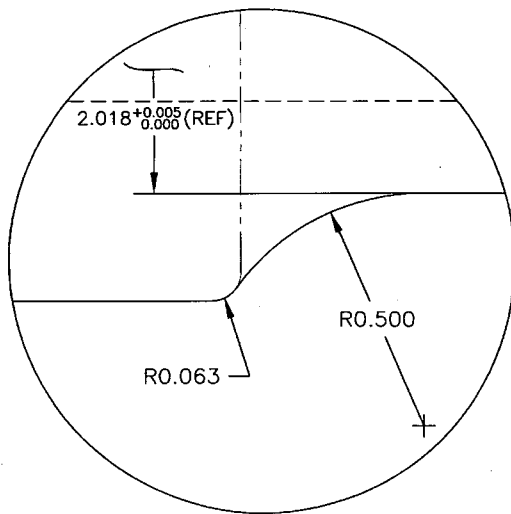

DETAIL B: CUFF
 TRANSITION
 SCALE 4:1

DETAIL C:
 TAPER RUN-OFF
 NOT TO SCALE

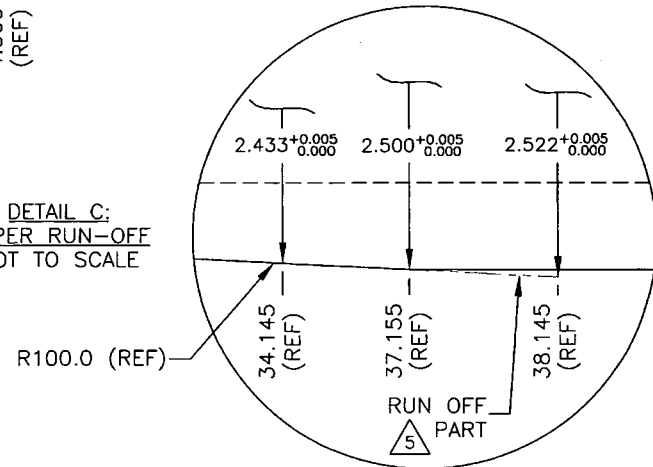

NO. 112558
 SHOP COPY
 RETURN TO
 ENGINEERING
 UNCONTROLLED COPY
 SUBJECT TO AMENDMENT
 WITHOUT NOTICE
 WJH/PH/DS

COPYRIGHT © 2000 BY DART AEROSPACE LTD.		DESIGN PH	DRAWN BY PH	DART	DART AEROSPACE LTD. HAMPSHIRE, ENGLAND, CANADA
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.		CHECKED DS	APPROVED DS	DRAWING NO. D206-667-243	REV. B SHEET 3 OF 3
DATE 05.07.26		TITLE CROSSTUBE ASS'Y (206L HIGH AFT)		SCALE 1:1	

DART SERVICE INSTRUCTION
TO AMEND INSTALLATION INSTRUCTIONS IIN-D206-667 REV. C AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D206-667 REV. 2
REF: CANADIAN STC: SH01-5
REF: FAA STC: SR01304NY

SHOP COPY
RETURN TO
ENGINEERING

UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER

For D206-667-101/-201/-103/-203 or D407-667-105 cross tubes at CHG 003 or later, the D2856-400-694/-773 42516 abrasion strip has been removed, the center D2891-1 or D2892-1 support has been bonded onto the crosstube using Magnabond 6398 and D3595-075-395/-450 Rubber Cushions have been installed underneath the MS21920-20/-22 Clamps. Amend parts list of the IIN-D206-667 section 5 and ICA-D206-667 Section 32.8 as follows:

REMOVE:

ITEM	QTY -101	QTY -201	QTY -103	QTY -203	QTY -105	PART NUMBER	DESCRIPTION
13	2	2	2		2	D2856-400-694	ABRASION STRIP
14				2		D2856-400-773	ABRASION STRIP

ADD:

ITEM	QTY -101	QTY -201	QTY -103	QTY -203	QTY -105	PART NUMBER	DESCRIPTION
24	4	4	4		4	D3595-075-395	RUBBER CUSHION
25				4		D3595-075-450	RUBBER CUSHION

-063 PH 08.11.11

To prevent the supports from shifting on the D206-667-101/-201/-103/-203 or D407-667-105 crosstubes at CHG 002 or earlier, the D2891-1/D2892-1 supports should be removed and re-installed as follows:

- 1) Follow section 32.1 of ICA-D206-667 for the removal of the crosstubes from the helicopter.
- 2) Remove the qty (2) MS21920-20/-22 clamps from the crosstube that fasten the D2891-1/D2892-1 supports to the crosstube.
- 3) Remove the D2856-400-694/-773 abrasion strip from the crosstube per section 32.5 of ICA-D206-667.
- 4) Inspect the crosstube surface underneath the support for corrosion and mechanical damage per items 5.3.1 and 5.3.2 of the 300 hour inspection of ICA-D206-667. Repair damage within acceptable limits per item 5.3.3 of the 300 hour inspection in ICA-D206-667. Touch up finish per item 5.3.9 of the 300 hour inspection.
- 5) Abrade area to which support will be applied with 400 grit sandpaper. Saturate a clean cloth with MEK or 4105S Wash'n'Wipe Degreaser or equivalent and wipe area until there is no residue.
- 6) Apply a 0.03" to 0.06" thick layer of Magnabond 6398 underneath the D2891-1/D2892-1 support and re-install the support on the crosstube as shown in Figure 1. Position and secure the D2891-1/D2892-1 support on the crosstube using MS21920-20/-22 Clamps. Install a D3595-075-395/-450 Rubber cushion underneath each MS21920-20/-22 Clamp. Torque clamps 80-100 in-lb. Let the D206-667-101/-201/-103/-203 or D412-667-105 crosstube assembly cure as per the Magnabond 6398 instructions before re-installing the crosstube on the aircraft.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: D. Shepherd
D. SHEPHERD (DE # 02)

DATE: 08.05.26
CERT. NO.: SH01-5
ISSUE NO.: 3

A	NEW ISSUE	HS	08.05.26
REV.	DESCRIPTION	BY	DATE
DESIGN	HS	DART AEROSPACE LTD	
DRAWN	HS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	PH	DRAWING NO.	REV. A
MFG. APPR.	B	DSI 9415	SHEET 1 OF 2
APPROVED	MP	TITLE	SCALE
DE APPR.		CROSSTUBE SUPPORT CHANGE	NTS
DATE	08.05.26	COPYRIGHT © 2008 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

7) Re-install the D206-667-101/-201/-103/-203 or D412-667-105 crosstube per section 32.2 of ICA-D206-667.

For customers who would like to upgrade their D206-667-101/-201/-103/-203 or D412-667-105 crosstubes from CHG 002 or earlier to CHG 003, the following kit can be obtained from Dart:

QTY -011	QTY -013	PART NUMBER	DESCRIPTION
X		DSI 9415-011	CROSSTUBE SUPPORT CHANGE (USABLE ON D206-667-101/-201/-103 OR D407-667-105)
	X	DSI 9415-013	CROSSTUBE SUPPORT CHANGE (USABLE ON D206-667-203)
4		D3595-075-395	RUBBER CUSHION
	4	D3595-075-450	RUBBER CUSHION

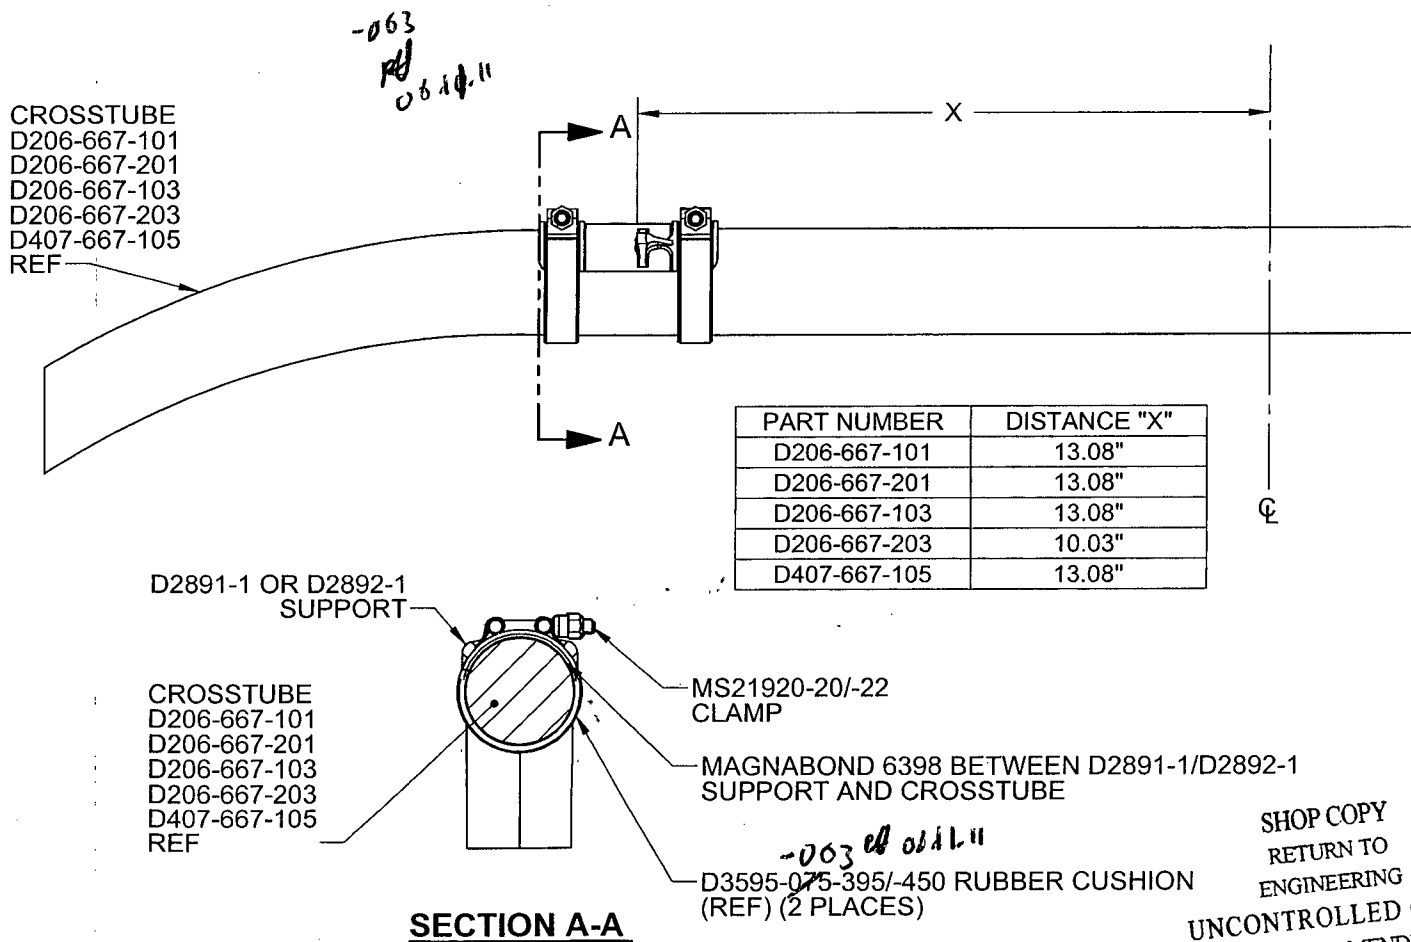


FIGURE 1 - CROSSTUBE SUPPORT

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 42588

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *D. Shepherd*
D. SHEPHERD (DE # 02)

DATE: 08.05.26
CERT. NO.: SH01-5
ISSUE NO.: 3

DESIGN	HS	DART AEROSPACE LTD	
DRAWN	HS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>PH</i>	DRAWING NO.	REV. A
MFG. APPR.	<i>E</i>	DSI 9415	SHEET 2 OF 2
APPROVED	<i>MP</i>	TITLE	SCALE
DE APPR.	<i>MP</i>	CROSSTUBE SUPPORT CHANGE	NTS
DATE	08.05.26	COPYRIGHT © 2008 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	



